

KÖSTER

Application of the KÖSTER Joint Tape 20 and Joint Tape 30 using KÖSTER KB-Pox Adhesive


1. Mask both sides of the joint with tape.



3. Mix the A and B components of KÖSTER KB-Pox Adhesive as stated in the technical guideline to a homogenous grey color. Apply KÖSTER KB-Pox Adhesive on both sides approx. 2 mm thick.




5. Immediately apply a second layer of adhesive on top of the tape and overlapping the masking tape on the sides. The center of the tape stays free of adhesive.

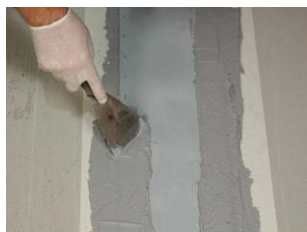

7. Leave the finished job to cure for approx. 24 hours.



2. Embed KÖSTER Joint Tape 20 min. 4 cm (Joint Tape 30 min. 5 cm) into the adhesive on each side. The adhesive is applied 2 cm farther onto the substrate.

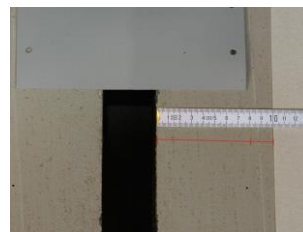

4. Press the KÖSTER Joint Tape onto fresh adhesive layer.



6. Remove the masking tape on both sides before the adhesive cures in order to achieve a clean finish.



8. After KÖSTER KB-Pox Adhesive has cured for 24 hours, the area waterproofing can be applied overlapping onto the epoxy layer.

